


# Important Safety Notice

## Bosch Dishwashers


Call 800.856.9226

An electronic component on certain Bosch dishwashers produced between May 1999 and July 2005 may pose a potential fire hazard.

 
Dishwasher models:

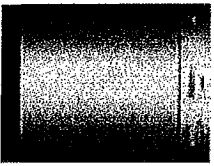


Model# SHE43C  
FD# FD8503 -  
FD8507

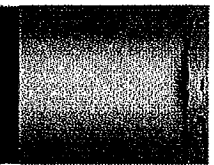 


Model# SHE44C  
FD# FD8503 -  
FD8507

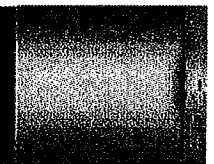 


Model# SHE46C  
FD# FD8501 -  
FD8505

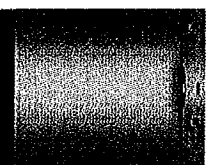 


Model# SHE66C  
FD# FD8501 -  
FD8505

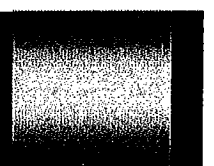 


Model# SHU33  
FD# FD7905 -  
FD8505

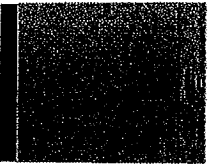 

Model# SHU42  
FD# FD8407 -  
FD8505

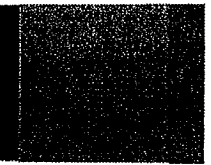 


Model# SHU432  
FD# FD8004 -  
FD8211

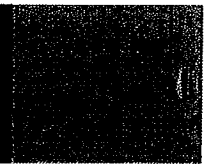 

Model# SHU43C  
FD# FD8205 -  
FD8507



 Model# SHU63A  
FD# FD8205 -  
FD8507

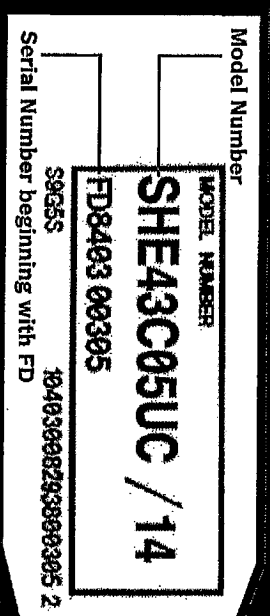

The brand name is printed on the dishwasher's front control panel. The model and serial numbers can be found inside the dishwasher door panel on the upper right side.

Please call us with your model number and FD number at 800.856.9226  
For more information visit [www.boschappliances.com/safetyrecall](http://www.boschappliances.com/safetyrecall)